


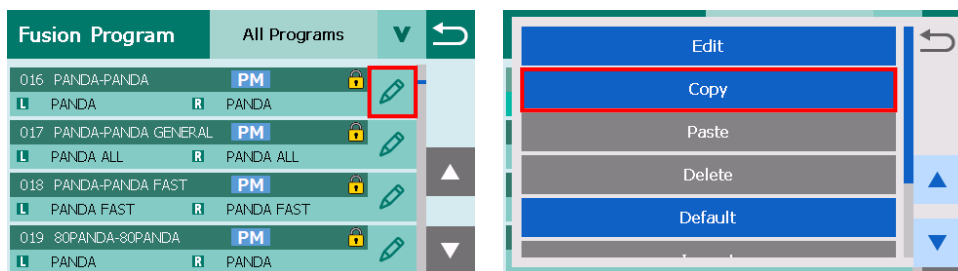
How to set up new PM program


We will explain how to set up the PM program files downloaded in FIBER BANK to the fusion splicer. If you have any questions, please contact us from "Contact" in FIBER BANK.


Install the downloaded PM programs to the fusion splicer. Please refer to "How to install the program files" for details of the installation method.

I . Copying the PM programs


1. Touch  icon to select "Copy" in pop menu and paste new destination.



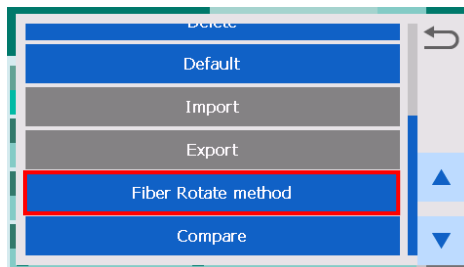

2. Select "Fiber Rotate method" from  of the pasted program.

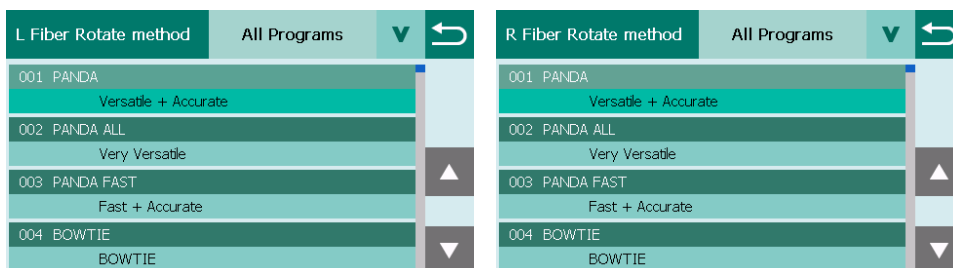


3. The left and right PM program selection screens will appear, so select the imported program.




II. Copying the not PM programs


1. Touch  icon to select “Copy” in pop menu and paste new destination.
2. Select “Edit” from  of the pasted program.

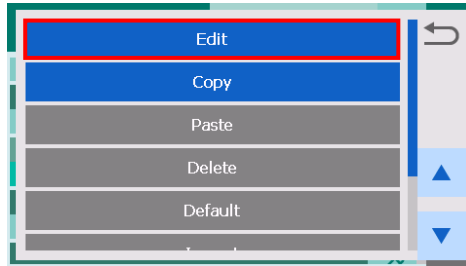


3. Select “Advanced Setting” from Edit and set the “Theta Rotate Type” setting to “Rotate Both”.

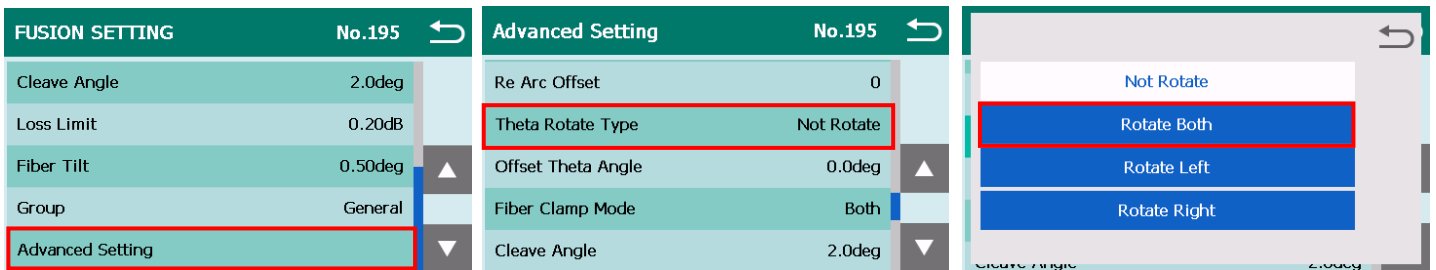

4. Press the  button twice and select “YES”.

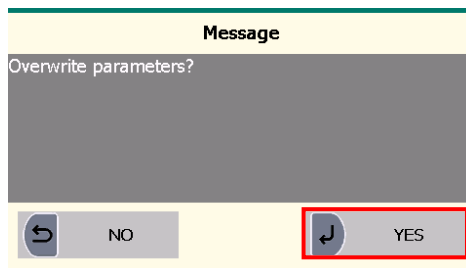

5. Select “Fiber Rotate method” from  of the pasted program.
6. The left and right PM program selection screens will appear, so select the imported program.